



**SBD<sub>b</sub>**  
**LIGHTING CONTROL UNIT**  
via DALI - CAN

#### Quick Facts

- An advanced and cost-effective lighting solution for optimizing comfort and energy usage.
- Integration with the LINDINSPECT® web interface for visualization with floor plans and other climate control in the building.
- Supported by a graphical tool for linking and managing lighting control rules.
- Bluetooth® for configuration via the LINDINSIDE mobile app.

Smart digital lighting control, based on presence and daylight usage, saves energy. SBD<sub>b</sub> supports wire- and battery-less Enocean switches, as well as other options, for greater flexibility and reduced installation costs. SBD<sub>b</sub> acts as a gateway via CAN to our intuitive and web-based configuration tool for lighting rules INCONTROL.

## Function

SBDb\* functions both as a DALI master for a DALI bus of luminaires and as a DALI bridge to Lindinvent's communication loop (CAN).


- DALI functionality allows, based on selected rules or conditions, individual, group, or "Broadcast" control of lighting to:
  - Go to max
  - Turn off
  - Dim up
  - Dim down
- DALI-functionality also allows lighting control via pre-programmed scene selections.

*\*According to DALI-Alliance: "SBD/SBDb v2 is a control device whose purpose is to send commands to registered or certified DALI-compliant control gear."*




Content	Page
Function	2
Connection Diagram	3
User Interface LINDINSIDE	3
LINDINSPECT® with the INCONTROL Tool	4
Addressed DALI	5
Addressed DALI with "Broadcast rules"	5
SBDb Boundaries	6
Technical Specifications	7

## Connection Diagram

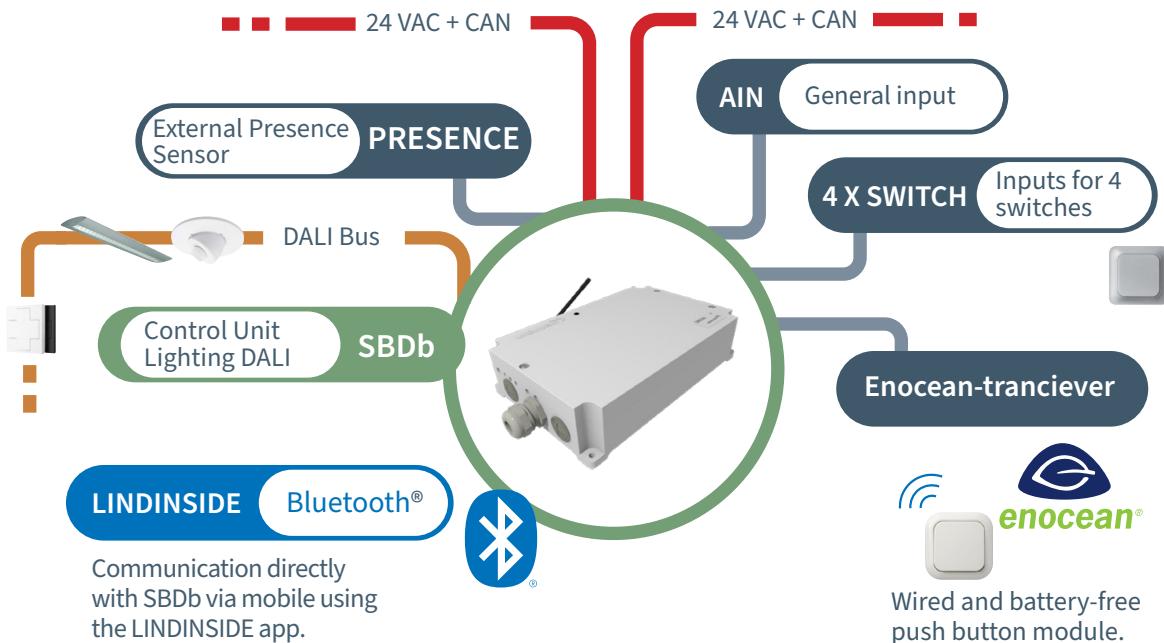


## User Interface LINDINSIDE

The LINDINSIDE mobile application allows connection via Bluetooth® directly to individual control units. Authorized personnel can use the app to identify control units for easy settings adjustments or to read values using a smartphone.

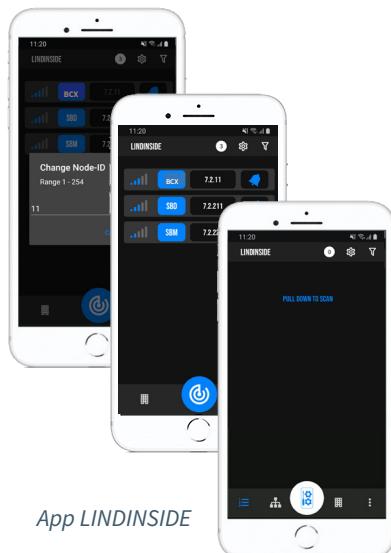


## LINDINSPECT® with INCONTROL Tool

LINDINSPECT® is a powerful web tool included in the system software that enables centralized and coordinated optimization, administration, and visualization of everything from control units to complementary systems for comfort and sustainable energy use in buildings.

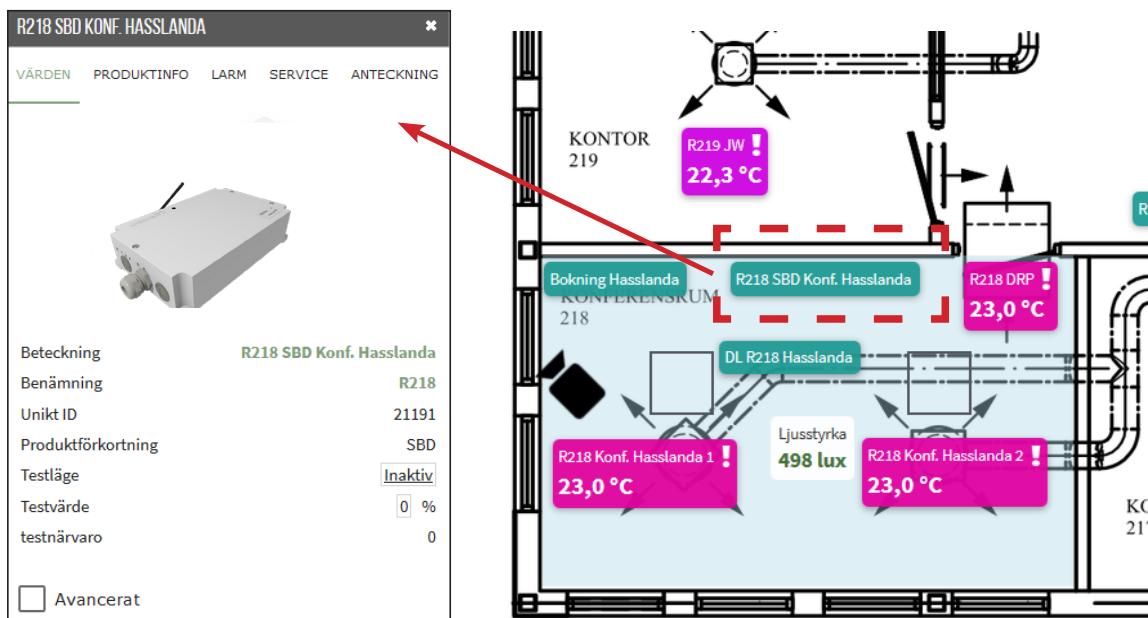

Through the LINDINSPECT® web tool, users can overview or display current lighting conditions in detail via floor plans.

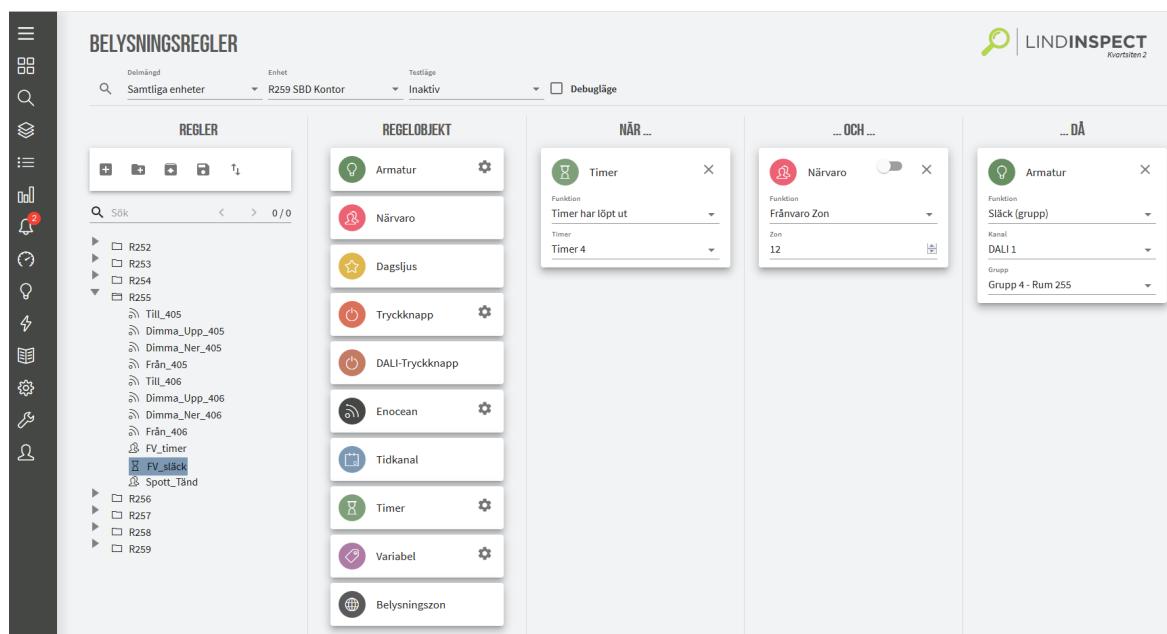


The graphical INCONTROL tool within LINDINSPECT® allows users to link rules to DALI-nodes.

## Addressed DALI

### SBD**b** with Addressed Units:

- SBD**b** is powered with 24 VAC.
- SBD**b** connects to the communication loop (CAN) and 24 VAC via Lindinvent's shielded four-wire cable.
- All units on the DALI bus are assigned unique addresses via a function in LINDINSIDE.
- All units are assigned Node-ID on the CAN loop. Support for Node-ID assignment is available in the LINDINSIDE mobile app.
- Units in the same room are assigned a common group number via the INCONTROL tool in LINDINSPECT®.
- Presence sensors in the active unit (AD) can be used to turn on lighting upon presence and turn off after a set time of absence.
- Light sensor (DLS) controls light intensity via SBD**b** when presence is detected.
- With a switch (TK) connected to the I/O module (DMC), the lighting can be manually controlled (Max/Off or Dim Up/Down). The same functionality can be achieved with wireless switches (Enocean).

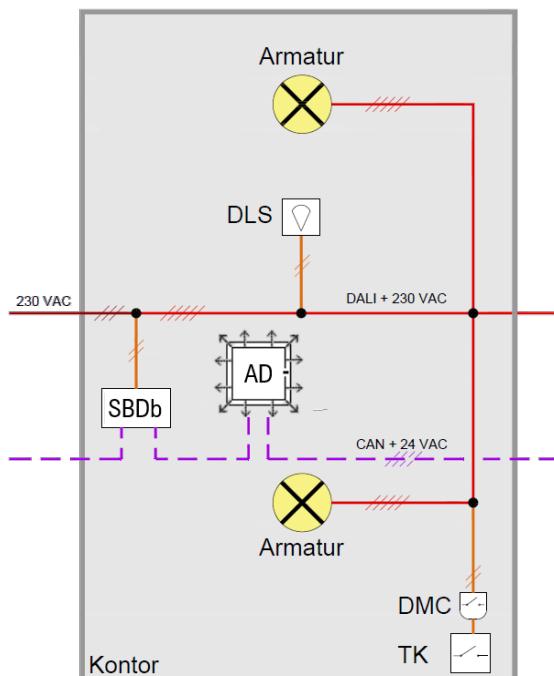


Example Operating Card with SBD**b** for Addressed DALI with Wired Switch (TK).

## Addressed DALI with “Broadcast Rules”

Fixtures (Actuators) connected to the same DALI bus are controlled via a common command:

- A DALI bus with fixtures and control devices is connected to each SBD**b**.
- SBD**b** is powered with 24 VAC.
- SBD**b** connects to the communication loop (CAN) and 24 VAC via Lindinvent's shielded four-wire cable.
- Each wireless switch (Enocean) is linked to the designated SBD**b** via the LINDINSIDE mobile app.
- All units on the DALI loop are assigned unique addresses via a function in LINDINSPECT®.
- One fixture is assigned a Node-ID on the CAN loop to represent the “Broadcast group” of fixtures during visualization in LINDINSPECT®.
- All control devices, such as switches, are assigned Node-ID on CAN to also be visualized.
- Presence sensors in active units (AD) are configured to belong to the same lighting zone, turning on the lighting upon presence and off after a set time of absence.
- Light sensor (DLS) controls light intensity along the facade when presence is detected.
- Fixtures in the inner zone remain on as long as there is presence in the zone.
- Lighting can be controlled via switches (TK). Dimming is possible for fixtures on an individual/local DALI bus.

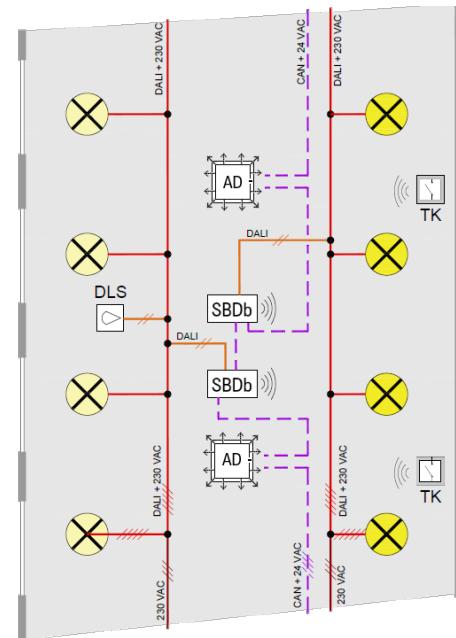

Example Operating Card with Wireless Switches (TK) “Enocean” and “Broadcast” Functionality. For more examples, see Lindinvent's project planning instructions for lighting control.

## Example Boundaries


Below is an example of how boundaries between Electrical Contractor (EE) and Ventilation Contractor (VE) can be divided. Lindinvent installations are often part of the ventilation contract but can also be performed as a separate contract.

Object	Delivery	Installation	Connection
1. Lighting Control Unit, SBD <sub>b</sub>	VE	VE	VE/EE
2. DALI + 230 VAC Cabling	EE	EE	EE
3. 24 VAC + CAN Cabling	VE	VE	VE
4. DALI Light Sensor, DLS	VE	EE	EE
5. DALI Lighting Fixture	EE	EE	EE
6. DALI I/O Module, DMC	VE	EE	EE
7. Spring-Return Switch	EE	EE	EE

Example Boundaries Between Electrical Contractor (EE) and Ventilation Contractor (VE)

### Responsibilities

The Electrical Contractor (EE) performs self-inspection of their installation while the Ventilation Contractor (VE) energizes the 24 VAC. VE addresses DALI components, calibrates light sensors, programs scenes, and other settings for the DALI system.

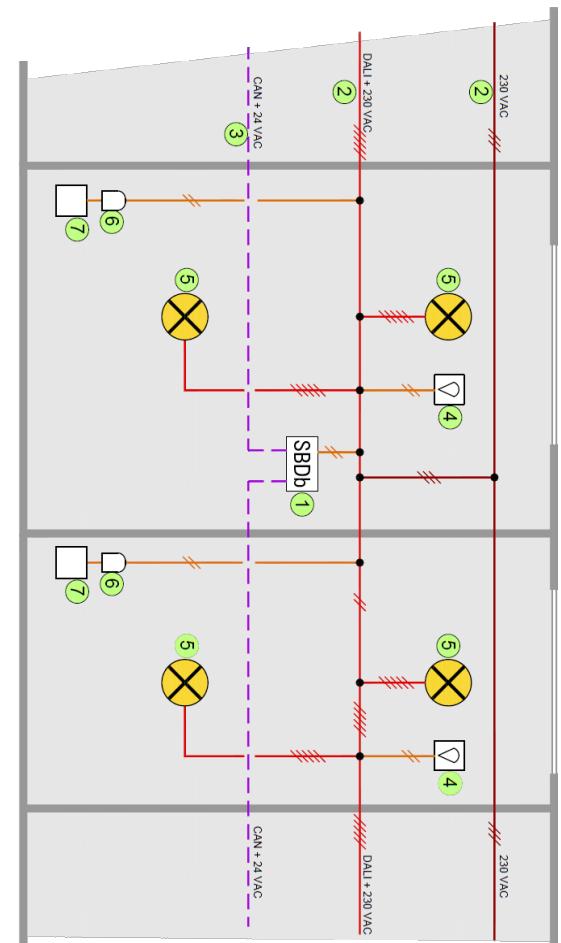

## Technical Specifications

### General

**Dimensions (mm):** 200 x 125 x 45 (LxBxH)

### Temperature Limits

Operation: 10°C till 40°C; <85% RF

Storage: -20°C till 50°C; <90% RF

**Material:** Polystyrene enclosure

**Net Weight:** 0,6 kg

**Color:** RAL 9003

**IP Rating:** Enclosure holds IP53

### Electrical System

**Supply Voltage:** 24 VAC

**Power:** Max 10W

**CE Marking:** Complies with EMC and Low Voltage Directive

### CAN connection

Connection to the CAN network is made with Lindinvent's shielded four-wire cable for 24 VAC and communication loop (CAN).

### Types of Equipment on a DALI bus

Actuators (fixtures) and control devices following the DALI protocol are installed on a DALI bus.

### Main Connections:

- 2 terminals for 24 VAC + CAN (CAN loop connection)
- 1 terminal for DALI bus
- Bluetooth® for connection via the LINDINSIDE app

### Restrictions for Addressed DALI (SBD**b**)

- One DALI bus per SBD**b**
- Maximum number of DALI nodes (actuators and control devices): 64
- Introduced limitation on total number of control devices:
  - DALI Switch or DALI I/O Module: 8
  - Presence and/or Light Sensors: 8
- Maximum number of groups: 16
- Maximum number of scenes: 16
- Maximum consumption on the DALI loop: 250 mA
- Guaranteed consumption on the DALI loop: 230 mA

### Restrictions for Addressed DALI (SBD2b)

- One DALI bus per SBD2b
- Maximum number of DALI nodes (actuators and control devices): 64
- Introduced limitation on total number of Light Sensors: 32
- Maximum number of groups: 16
- Maximum number of scenes: 16
- Maximum consumption on the DALI loop: 250 mA
- Guaranteed consumption on the DALI loop: 230 mA

### Connections for Peripheral Equipment

- Wired, potential-free, switches: 4 pcs
- Enocean transceiver with antenna amplification
- intended for the connection of a maximum of 16 wireless and battery-free switches.
- Max distance to wireless switch: 15 m radius from SBD**b**
- PIR: Wired presence detector
- 1 terminal for general analogue in, 0 - 10 VDC

## Complementary Documentation SBD**b**

Documents can be accessed via the product page on [www.lindinvent.com](http://www.lindinvent.com)

Document	Comment
<b>Installation Instructions</b>	Screw it onto an electrical ladder or centrally in the service area. See the external connection diagram for equipment connections. The screen should be isolated.
<b>Commissioning Instructions</b>	Shows steps for commissioning. The LINDINSIDE mobile app guides the setup of functions and configuration of the DALI bus. See the INCONTROL tool in LINDINSPECT® for assigning lighting control rules.
<b>Maintenance Instructions</b>	Considered maintenance-free.
<b>External Connection Diagram</b>	Shows connections on the circuit board.
<b>Environmental Product Declaration</b>	For assessment by the Byggvarubedömningen in Sweden.
<b>Modbus List</b>	Addresses for available symbols/variables.
<b>AMA Text</b>	AMA codes for DALI equipment including SBD <b>b</b> .

